

Key to the Lights on the Base Unit

Power Light:

- Solid - Power is ON
- Blinking - The base is running on the backup batteries
- Off - There is no power to the base



Pendant Battery Charger
Charges the spare pendant battery.

INFO Light

- Off - Battery is sufficiently charged and pendant and base are properly synchronized.
- Blinking - Either the battery needs to be exchanged with the one in the charger on the front of the base or that the base can no longer find the pendant.

Charging the Pendant Battery

When the base unit is announcing that the Battery is low, and needs to be replaced soon," or "Replace battery now," it is referring to the white pendant battery in the pendant, not the four green rechargeable backup batteries. Replacing actually means recharging, and is easy to do with the built-in charger on the front of the base unit.



Battery Charging Light

- RED - pendant battery is being charged
- GREEN - the charger is in Standby. (This means that the charger has turned off, allowing the battery to remain in the charger indefinitely.)
- NO LIGHT - Battery is malfunctioning or not seated properly.

The Battery Charging Light must be RED if a low pendant battery is inserted in the charger. If not:

- Make sure the flat, negative end is against the spring in the charger, or
- Press down on battery to ensure proper contact.
- If you still cannot get the light to turn RED even though the pendant is announcing a low battery or your pendant is unresponsive, contact Customer Service at the number below.

Checking your System

Perform a System Check every two weeks or if the INFO light is blinking:

- Press the Gray System Check/Battery Test button for **FOUR seconds**, or until you a **double beep**.
- You should hear a dial tone, the announcement "All systems are OK," and a battery check.



**Gray System Check/
Battery Test button**



**Blue
Emergency Call
button**